Model

AC Instrument

SPEC. SHEET

Model: SF1E

1ch Thermocouple Transmitter

SF1E - 🗆 🗆 🗆 - 🖸 -Input (Burnout: Upscale) 01: K 02: J 03: R 04: S 05: B 06: E 07: T 08: N 09: PL-II 10: W5Re/W26Re 11: W3Re/W25Re (Burnout: Downscale) 21: K 22: J 23: R 24: S 25: B 26: E 27: T 28: N 29: PL-II 30: W5Re/W26Re 31: W3Re/W25Re Input sampling period 01: 25ms 02: 125ms 03: 250ms Output 01: 4 to 20mA DC 06: 0 to 1V DC 02: 0 to 20mA DC 07: 0 to 5V DC 03: 0 to 12mA DC 08: 1 to 5V DC 04: 0 to 10mA DC 09: 0 to 10V DC 05: 1 to 5mA DC Socket 1: Screw fall prevention, finger-safe (For Y terminal) 2: For Ring terminal Power supply 0: 100 to 240V AC 1: 24V AC/DC


How to Order

Specify a model and input range. (e.g.) SF1E-010101-1-0 Default value

Input	K -200 to 1370℃	
Output	4 to 20mA DC	
Input sampling period	25ms	

■ Input Specifications

Thermocouple Input resistance: $1M\Omega$ or more External resistance: 100Ω or less, however, B: 40Ω or less Burnout: Upscale/Downscale

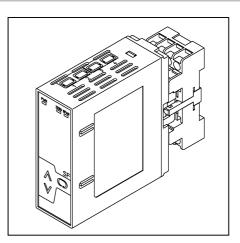

Input:			
Thermocouple	Input Range		
К	-200 to 1370℃	-328 to 2498°F	
J	-200 to 1000℃	-328 to 1832°F	
R	-50 to 1760℃	-58 to 3200°F	
S	-50 to 1760℃	-58 to 3200°F	
В	0 to 1820℃	32 to 3308°F	
E	-200 to 800℃	-328 to 1472°F	
Т	-200 to 400℃	-328 to 752°F	
Ν	-200 to 1300℃	-328 to 2372°F	
PL-II	0 to 1390℃	32 to 2534°F	
W5Re/W26Re	0 to 2315℃	32 to 4199°F	
W3Re/W25Re	0 to 2315℃	32 to 4199°F	
Minimum anan: El	0°C (100°E)		

Minimum span: 50°C (100°F)

Output Specifications DC Current

Allowable load resistance	Zero adjustment range	Span adjustment range
700 Ω or less	-5 to 5%	95 to 105%
700Ω or less	0 to 5%	95 to 105%
1.2k Ω or less	0 to 5%	95 to 105%
1.2k Ω or less	0 to 5%	95 to 105%
2.4k Ω or less	-5 to 5%	95 to 105%
	load resistance 700Ω or less 700Ω or less $1.2k\Omega$ or less $1.2k\Omega$ or less	load resistance adjustment range 700Ω or less -5 to 5% 700Ω or less 0 to 5% 1.2kΩ or less 0 to 5% 1.2kΩ or less 0 to 5%

DC Voltage

Output range	Allowable load resistance	Zero adjustment range	Span adjustment range
0 to 1V DC	100Ω or more	0 to 5%	95 to 105%
0 to 5V DC	500Ω or more	0 to 5%	95 to 105%
1 to 5V DC	500Ω or more	-5 to 5%	95 to 105%
0 to 10V DC	$1k\Omega$ or more	0 to 5%	95 to 105%

F SFRIFS



Performance

Accuracy: Within ±0.2% of input span (at 23°C of ambient temperature) R, S input, -50 to 200°C (-58 to 392°F): Within ±8°C(16°F) B input, 0 to 300°C (32 to 572°F): Accuracy is not guaranteed. K, J, E, T, N input, Less than 0°C (32°F): Within±0.5% of input span Cold junction compensation accuracy: Within $\pm 1^{\circ}C$ at -5 to 55℃ Input sampling period: 25ms, 125ms, 250ms (Must be specified) Response time: 65ms (typ.)(0→90%)(Input sampling period: 25ms) 225ms (typ.)(0→90%)(Input sampling period: 125ms) 425ms (typ.)(0→90%)(Input sampling period: 250ms) Temperature coefficient: ±0.015%/°C or less Insulation resistance: $10M\Omega$ or more, at 500V DC (Input - Output - Power) Dielectric strength: 2.0kV AC for 1 minute (Input - Output - Power)

General Structure

Case: Flame-resistant resin Color: Light gray Front panel: Membrane sheet

Adjustment: Using the front keypad

- (1) Press the MODE Key. The ZERO indicator becomes lit. The unit moves to the Output ZERO adjustment mode.
- (2) Press the MODE Key in the Output ZERO adjustment mode. The SPAN indicator becomes lit. The unit moves to the Output SPAN adjustment mode.
- (3) Pressing the MODE Key returns to Step (1). If the MODE Key is pressed for approx 3 sec, or if no operation occurs for approx. 30 sec, the unit will revert to the RUN mode.

Indication:

PWR indicator (Green):


Lit when power is turned ON.

Flashes in 0.5 second cycles if non-volatile memory errors occur.

Flashes in 0.25 second cycles if input errors occur. ZERO indicator (Yellow):

Lit in the Output ZERO adjustment mode. SPAN indicator (Yellow):

Lit in the Output SPAN adjustment mode.

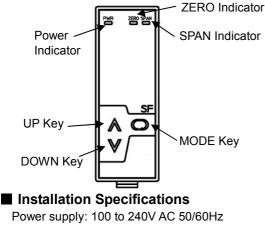

Power supply: 100 to 240V AC 50/60Hz 24V AC/DC 50/60Hz Allowable voltage range: 85 to 264V AC 20 to 28V AC/DC Power consumption: Approx. 6VA

Ambient temperature: -5 to 55°C

Ambient humidity: 35 to 85%RH (non-condensing)

Weight: Approx. 190g (including socket)

Mounting: DIN rail

Dimensions: W30 x H88 x D108mm (including socket)

Attached Functions

Power failure countermeasure: The data is backed up in non-volatile IC memory. Self diagnosis:

The CPU is monitored by a watchdog timer, and when an abnormal status is found on the CPU, the unit is switched to warm-up status turning all outputs OFF. Cold junction compensation: Available

Environmental Specifications

RoHS directive compliance


Settings

Function keys


- (1) UP Key: Increases a numerical value.
- (2) DOWN Key: Decreases a numerical value.
- (3) MODE Key: Switches from RUN mode to

the Adjustment mode, and

registers the adjustment value.

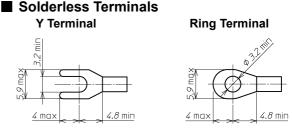

Circuit Configuration, Terminal Arrangement

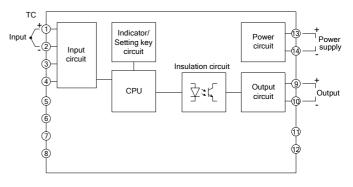

External Dimensions (Scale: mm)

